BRISTAN

 
Installation Instructions & User Guide

Please leave these instructions with the end user



Specifications Dynamic Water Pressure Mier o z bar Marc 50 bar









be at least 10°C above the required blend temperature























Minimum Fitting Depth: 60mm Manieuse. Fitting Death: Times

Concealing Plate

And current toy-thes. Por full installation Requirements & footes (RRs) Folksion salam ward for Silant in the West makes supplies in award coraof Ratura resistancersis. Hefore installing this product the water supply result for the escapity flushed in order to remove any swarf salder air-Full arress must be made available for future maintenance." servicine purbiners.

All products manufacturer and contried by Brigger are sale to use

This product needs to be installed in accordance with and weet the

requirements of the Wider Supris (Wider Estings) Regulations (900)

provided that they will included brokens and receive legular

maintanance in accordance with those instructions.

Balons of tiling into work, shack that there are no hitten electrical wires, cables or visiter a looky pines. This pan he observed with the salet of an electronic risk schot

If power tools are used do not forget to. - Wear our protection


- Unplug equipment efter use. The persient must not be madified in one and

means not wrough utilities large

ins this will investigate the quarantee. If in doubt, cortact a registered plumber, your Facal Water. Authority or the Secretary of the Institute of Plumbing.

ARRIVED BY TO BUILD The iniziture of Pruniping. 64 Speach Lane.

RESERVATION, THE LUTTURE ATTENT

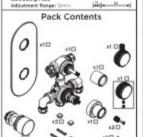





south the sour account cooley

Connect the inlet

plant ensuring the

olives are fitted.





Replace the elapors, ensuring the

filters are fitted.

Point

valve for any leaks.







 




REMEMBER

not on the sen










General Cleaning

Bristan products are made from promium materials, with hand polished, PVD, EPD or electroplated finishes.

Your shower should be regularly cleaned with warm water, a mild pH-noutral liquid spap, and polished with a soft cloth. Any residues from soap, toothpasts, shampool and shower gets can cause blemishes if not rinsed off streight after use.

 Household bleaches and cleaners contain heath chemicals and may damage the surface finish. Avoid using abrasive cloths, accurring peds, scrub sponges, steel wool or arwhims surface.




Wall Outlet Installation

Choose the location for the swill autiet and treate a 25-30mm hole in the wall. Ensure your shower accessories have enough reson from that position. Proch the wall surface.

Servicing Intervals

To reduce the build up of lime score and to arrains this shower works to its maximum perfurnance we recummend this choiser is serviced every 6-12 months depending on the hardness of your water.

 Maintenance - Cartridge Cleaning



Follow Step 5 in the Installation Steps, fetting a VZ* female connection at the hole in the wall (not supplied).

Screw the wall outlet into the 1/2" formals connection, the 1/2" formals connection, ensuring the nubble used is 1 lived to the back of the wall outlet.



Samptorn	Cause	Demedy
Ne flow or low flow rate	Parually dissect solence valve.	Caren solation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Peroxip water flow rate or pressure through system.
	Heisel of vester is below the minimum dislience required.	Refer to the specification for the minimum distance required.
	Are the weter socially premiums believae?	l'ipressures ere unbelenced, a pressure reducing valve should be used for optimum performance.
	Hist or cold water being shawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the shower
	Alriack or partial blockage in the supply (alpework)	Plush through placework and filters to creare removal of debris and any arrivals.
	Hot/Cold water supply has failed	Check the hot and cold feeds. The shower will not work if either falls.
Maximum Water Temperature too Hot/Calid	Maximum Woter Turnusrotans needs scjusting	Refer to the Temperature Setting section to set your decised insulinurs temperature.
Cutlet Water Temperature too Hot/Cold	Filter/pipe blockage	Flush through pipework and filters to ensure remove of debns and any articles
	Instaltion conditions o-code operating parameters.	Melar to the specification for the minimum distance required.
	Hat water temperature is less than 10°C. above the required blend temperature.	Adjust hot water temperature or wait for water to reheat if a styred water system is used.
	Instantineous water not lighting because the sider fluir little is too low.	Increme weter flow retail through the system. Refer to the Heintenance section to clean/check the carbridge and filter for any damage. Contact your boiler manufacturer.
	Instantianeous visiter not igniting because the water pressure is too low.	Refer to the operification for system requirements: increase water greenure through the system. Contact your boller monetocturits.
Only hot/ cald water from Shower Velve	Iniot water supplies are reverses:	Check the water infet connections are the currect way around that on the loft, cold on the right when viewed from the front. Rework pipework as necessary.
	Filter/place blockage	Flush through pipework and filters to ensure removal of debric antillarly airlocks.
Water dripping from shower	This is normal for a short time after using the shower.	This is caused by residual water tension, the laulid up of visiter in the shower.
	If water continues to drip, passibly dive to the certridge	Remove carridge and clean refer to Maintenance' section before starting any minimenence.
Shower does not turn on	Closed isolation valve.	Open icolation valve.
	Mains visiter supply jurned off.	Tam on mains water supply.

Our Guarantee

Troubleshooting

At the law, we what it wake things as a way as probled for our sustainess. That's why we offer active according to all our products, effective from the date of push has beginn proviped of mind. To clear your been guaranteed ormals upon the GIT code and register your product. Accordingly set a www.biristan.com/register.

For any other service, plyaya cell our Customer Benede on **0330 026 6273** where our capers learn of advisors will be able to offer you any help and advice.

For full gusconine terms and conditions visit www.bristae.com/lenvice-contro/guarantees.

Bristan Group Ltd.

UKC Rinton Group, R78 (St).

BU: Macro Gurope S & rl. 14 Rue Strechen
6533 Herodorf, Lucenbourg.

Customer Service: +4-850 (126 6375 Web: www.bristen.com Small: enouge editor-stan.com

A Haice Company







Installation Instructions & User Guide

Please leave these instructions with the end user

ARM CTRD02 BLK (D4)

Specifications

Dynamic Water Pressure

Max: 5.0 bar Min: 0.2 bar

Maximum Static Pressure: 10.0 bar

Inlet Water Temperature



Maximum Hot 65°C IMPORTANT


The inlet hot water must be at least 10°C above the require bland temperature.

Inlet Connections



1/2" BSP

Pack Contents

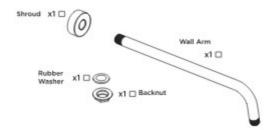

Tools Required for Installation







Prior to Installation









Spare Parts

All products manufactured and supplied by Bristan are safe to use provided that they are installed. operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Pittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byeless 2014. For full installation Requirements & Notes (IRN) please visit www.wrasepprovals.co.uk/approvals-directory

leolation valves must be fitted to the inlet eater supplies to ensure ease of future mantenance. Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

If power tools are used do not forget to:

- Wear eye protection

- Unolug equipment after use


This product must not be modified in any way as this will invalidate the guarantee.

To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.

Installation




PLEASE NOTE - Products shown in these instructions are for illustration purposes only. Your product can still be installed by following these instructions.

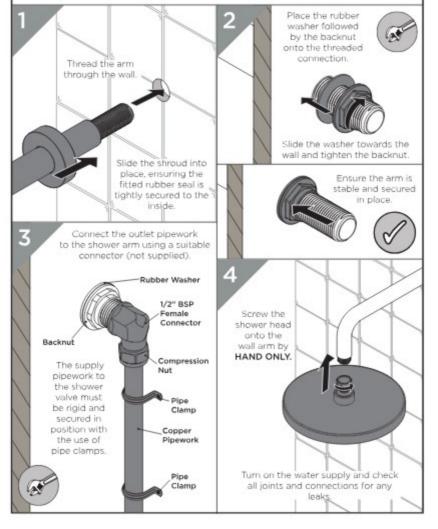

Alternative Installation



PLEASE NOTE - Products shown in these instructions are for illustration purposes only. Your riser outlet can still be installed by following these instructions.

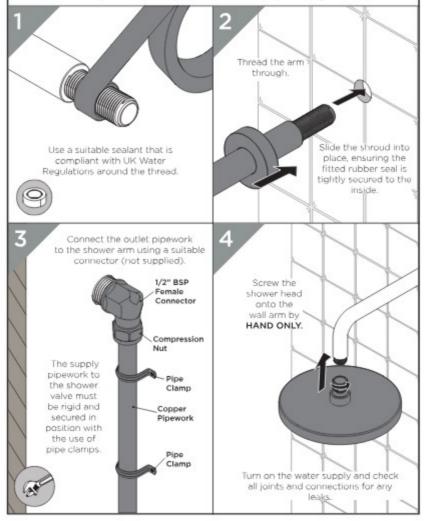

Cleaning

General Cleaning

Bristan products are made from premium materials, with hand polished, PVD, EPD or electroplated finishes. Your product should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Cleaning The Shower Head

The hardness of the water in your area will determine how often you should clean your shower head. Build up of scale in particularly hard water areas combined with constant use means you may need to clean your shower head weekly. To ensure continued performance, the shower head needs to be regularly de-scaled.

Contact Us

Bristan Group Ltd. A Masco Company

BRISTAN GROUP

UK: Bristan Group.

Pooley Hall Drive.

Birch Coppice Business Park.

Dordon, Tamworth

B78 ISG.

EU: Masco Europe S.à.r.l.

14 Rue Strachen 6933 Mensdorf Website: Call Us:

Email Us: enquire@bristan.com

www.bristan.com +44330 026 6273

Luxembourg

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the GR code and register your product. Alternatively visit www.bristan.com/register.

For any other quaries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advisor.

For full quarentee terms and conditions visit www.bristan.com/service-centre/guarantees.



BRISTAN

Installation Instructions & User Guide

Please leave these instructions with the end user

FH SLRD01 BLK (D3)

Specifications

Dynamic Water Pressure

Max: 5.0 bar Min: 0.2 bar



Maximum Static Pressure: 10.0 ber

Inlet Water Temperature



Maximum Hot 85°C

IMPORTANT

The inlet hot water must be at least 10°C above the require bland temperature.

 
Inlet Connections

 


1/2" BSP (female)

Pack Contents

Installation Products shown in these instructions are for illustration purposes only. Your shower can still be installed and operated by following these instructions.







Ensure the filter

washer is correctly inserted into the fixed head.



Screw the shower head onto the wall arm by HAND ONLY. Turn on the water supply and check all joints and connections for any leaks.

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed. operated and receive regular maintenance in accordance with these instructions

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Pittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byeless 2014. For full installation Requirements & Notes (IRN) please visit www.wrasepprovals.co.uk/approvals-directory

isolation valves must be fitted to the inlet water supplies to ensure age of future maintenance. Before installing this product the water supply must be thoroughly flushed in order to remove any smarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

If power tools are used do not forget to:

- Wear eye protection

- Unplug equipment after use

This product must not be modified in any way as this will invalidate the guarantee.

Spare Parts



To replace any spare parts for your tap, why ot scan the OR Code or visit www.bristan.com and search for your product.

Cleaning

General Cleaning

Bristan products are made from premium materials, with hand polished, PVD, EPD or electroplated finishes. Your product should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Cleaning The Shower Head

Your Bristan shower head is equipped with rub-clean nozzles for easy cleaning. Simply rub your fingers across the rubber spray jets regularly and before you turn the shower on to remove and scale or debris.

The hardness of the water in your area will determine how often you should clean your shower head. Build up of scale in particularly hard water areas combined with constant use means you may need to clean your shower head weekly. To ensure continued performance, the shower head needs to be regularly de-scaled.

Contact Us

Bristan Group Ltd. A Masco Company

BRISTAN PARTIE BRISTAN GROUP

UK: Bristan Group.

Pooley Hall Drive.

Birch Coppice Business Park

Dordon, Tamworth

B78 ISG.

EU: Masco Europe S.à.r.l.

> 14 Rue Strachen 6933 Mensdorf Luxembourg

Call Us:

Email Us: enquire@bristan.com Website: www.bristan.com +44330 026 6273

Our Guarantee

At Bristen, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

for full guerantee terms and conditions visit www.bristan.com/service-centre/guarantees.



BRISTAN

Installation Instructions & User Guide

Please leave these instructions with the end user

Product Code: C W05Q02 BLK (Df)

Specifications

Working Pressure







Tools You'll Need



Inlet Connections



15mm Compression via Wall Mount

Prior to Installation

all products manufactures and supplies by thistory are sate provided they are instalted used correctly and receive requisir resembleshede in accompliance unit il mese una rudiciana

American passes

culature valves must be littled to the inlet water samples to ensure seaso of future maintenance.

The product much not be modified in my way as this will. involving the quantities.

Pull acress must be made available for full or maintenance. I servicing perposes This product needs to the installed in accordance with and

meat the requirements of the Water Supply (Water Fittings)

Before starting any installation plants consider the fallewing before stilling into walls, check that there are no hidden plactrical wires, public, or leater rupply place, this can be checked with the aid of an electronic detector.


of province stools are used do not forget to: Wear eye protection Unplug equipment ofter use

Werning it is bushille the youthoroughly fluin through colden etc before using this product. Parlary to carry out this procedure could cause profilered or damage.

If in itsues, conduct a registered prantier or your Latter Water Judgments or the terretary of the estimate of

1914 2 614 5. Tel: 01708 472701


Pack Contents

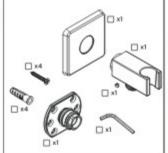

Spare Parts

To replace any spare parts for your product why not some the GR Code or visit www.bristan.com and sourch for your product.



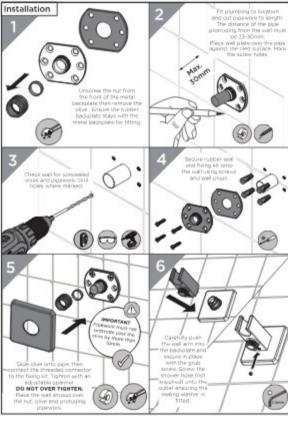

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

General Cleaning

Bristan products are made from premium materials, with hand polishing and electroplated, PVD or EPD finishes.

Your taps, shower and accessories should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampons and shower dels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish.

Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Contact Us

BRISTAN

..... RESTAN CROSSP

Bristan Group Ltd. A Masco Company

UK: Bristan Group.

Pooley Hall Drive. Birch Coppice Business Park. Dordon, Tamworth

FI78 15G.

EU-Masco Europe S.Ar.L.

14 Rue Strechen 6933 Mensdorf Luxembourg

Website Call Us:

Email Us: enquire@loristan.com www.bristan.com +44330 026 6275

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid quarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit

www.bristan.com/register.

For any other gueries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full quarantee terms and conditions visit www.bristan.com/service-centre/ guarantees.

