



Montana Wall Mounted Bath Filler

Installation

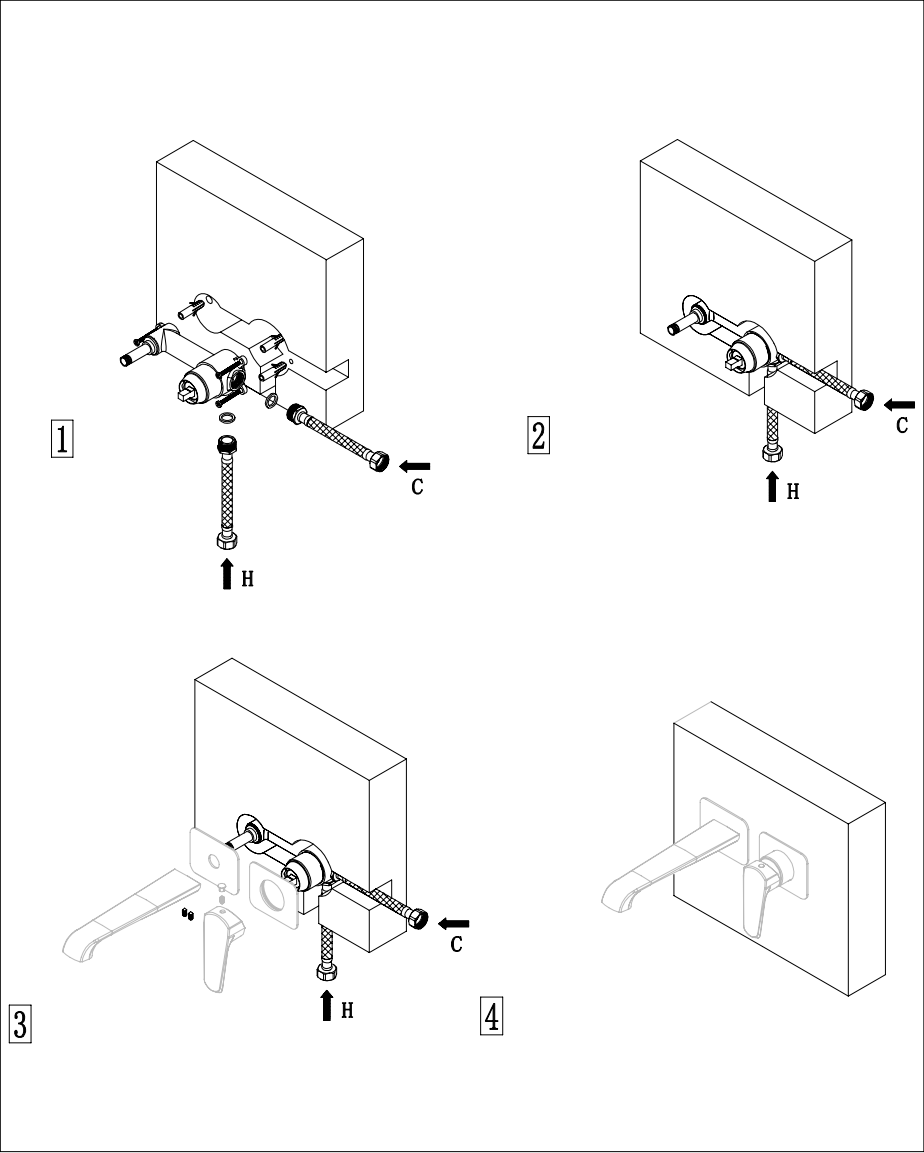

Technique drawing

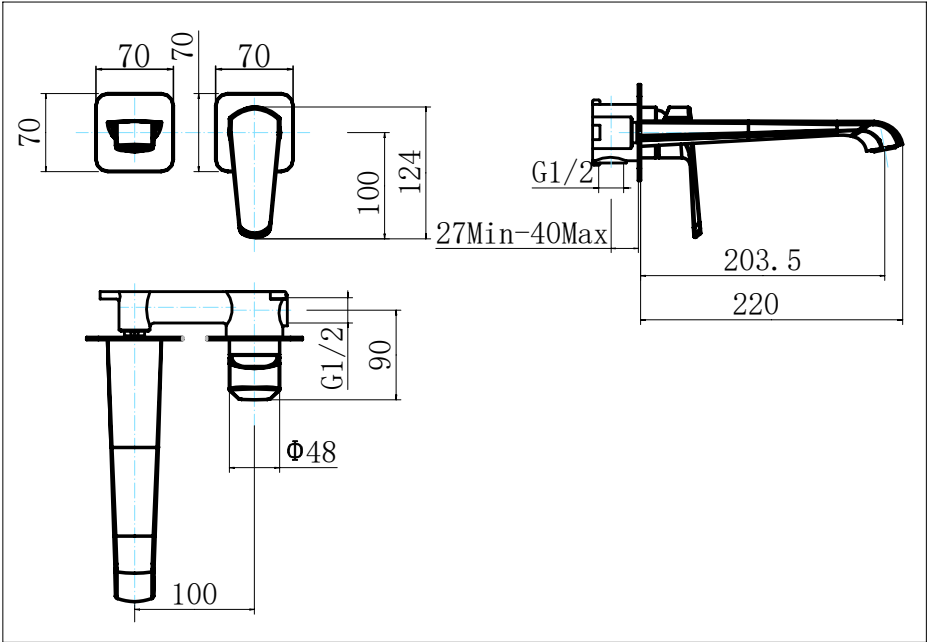

Explosion drawing

