



HOUSE

FITTING INSTRUCTIONS

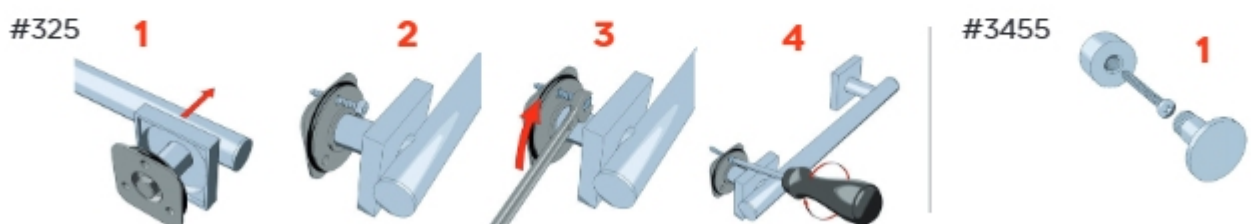


#320	#341	#355
#3231	#3411	#356
#326	#3414	#358
#327	#342	#359
#332	#343	#361
#333	#344	#369
#3364	#3464	#370

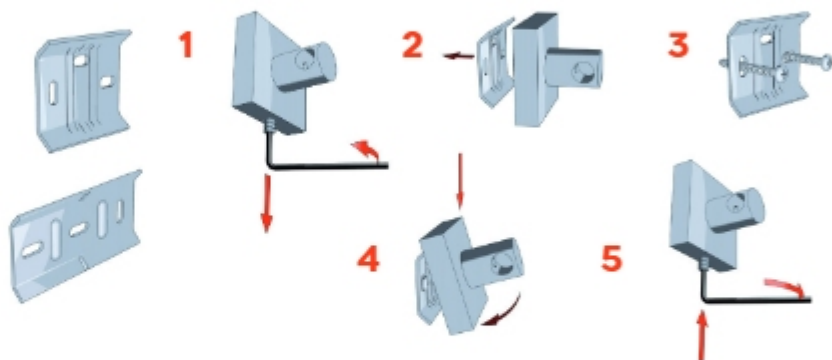


#3455



Mounting plate for glue is bought separately
 Monteringsbeslag för lim köpes separat
 Monteringsbeslag til lim købes separat
 Monteringsbeslag for lim kjøbes separat
 Limattava asennusbanslevy ostetaan erikseen
 Montageplatten um kleben separat kaufen
 Not to glue: grab bars (#225, #325), towel rails
 (#226, #326, #328), hooks (#245, #259, OK327)
 and AIR

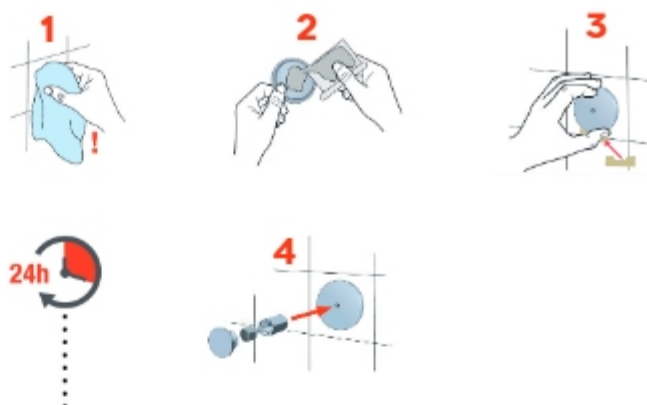

#320	#3411	#356
#3231	#3414	#358
#327	#342	#359
#332	#343	#361
#333	#344	#369
#3364	#3464	#370
#341	#355	

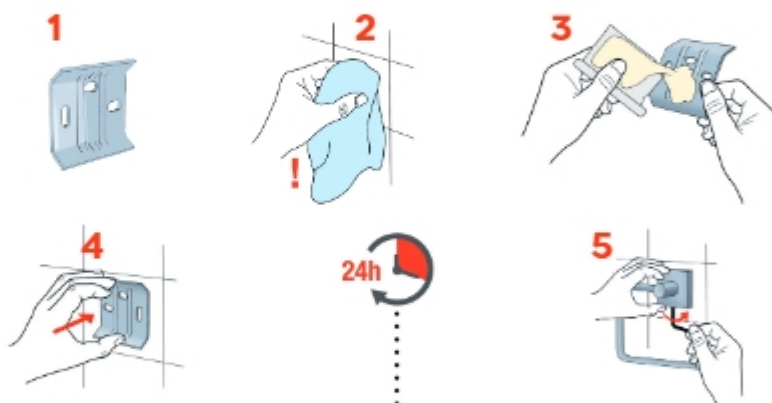

Not recommended for mounting on wet room wallpaper.
 Rekommenderas ej för montering på våtrumstapet.
 Montering på våtrumstapet anbefales ikke.
 Montering på våtrumstapet anbefales ikke.
 Ei suositella asennettavaksi märkätöiden tapetille.
 Nicht für die Montage auf Tapeten in Feuchträumen geeignet.



www.smedbo.net

SMEDBO