# **BRISTAN**

#### Installation Instructions & User Guide

Please leave these instructions with the end user

Product Code: AL BF Range (D1)


### Specification

#### **Dynamic Water Pressure** Max: 5.0 bar Min: 0.2 bar



Maximum Static Pressure: 10.0 bar

#### **Inlet Water Temperature**

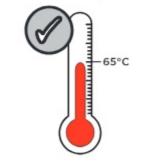

Maximum Hot: 65°C

#### Inlet Connections




3/4" BSP

#### Outlet



Recessed M16.5 Flow Straightener

#### **Pack Contents**

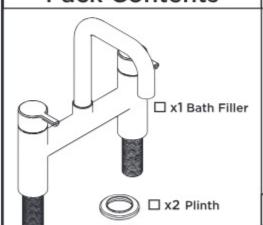




x2 Rubber Washer



☐ x2 Backnut

#### Operation

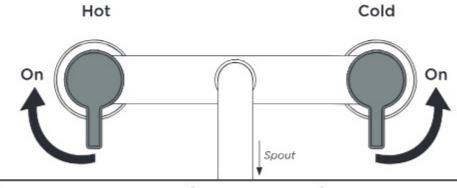

## **Tools Required**













#### Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014.

For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

x2 Plinth Seal

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.


This product must not be modified in any way as this will invalidate the guarantee.


#### **Spare Parts**



the QR Code or visit www.bristan.com and




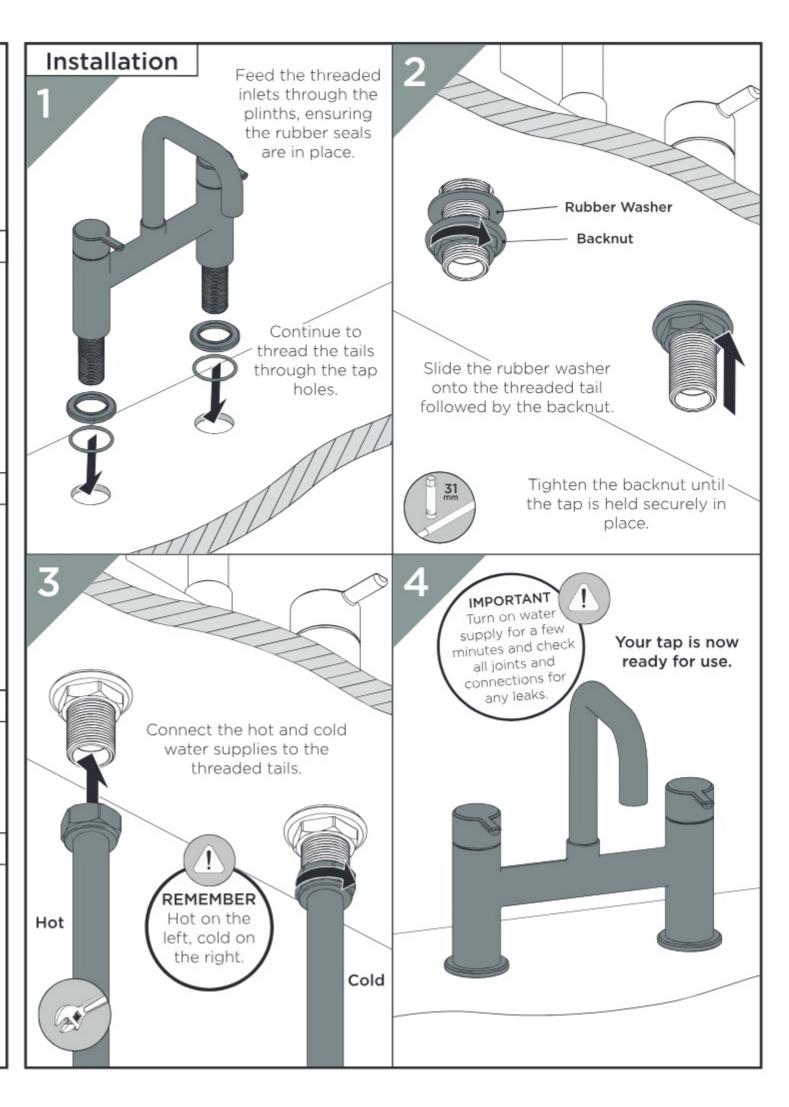

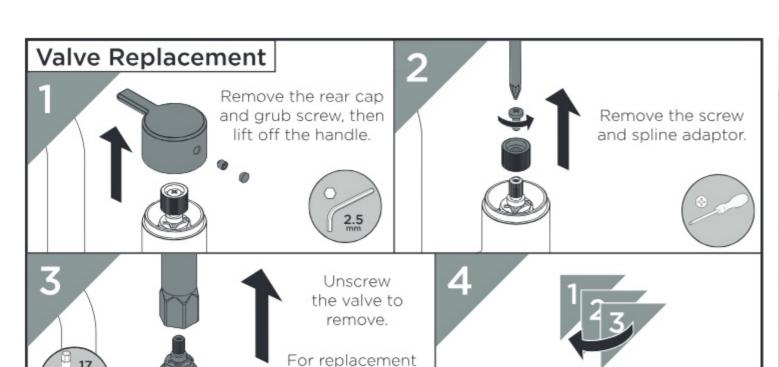

valves, see

SPARE PARTS.

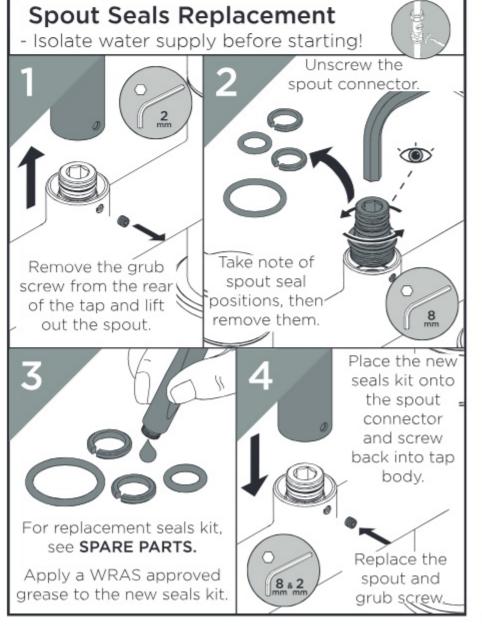



solution to de-scale.

Reverse steps to replace

the valves and handles.

#### **Troubleshooting** Remedy Symptom Cause Partially closed isolation valve. Open isolation valve. Flush through pipework to ensure Airlock or partial blockage in the Low Flow removal of debris and any airlocks. supply pipework. Partial blockage in the outlet Remove to Clean and soak in suitable solution. No hot water or Instantaneous water heater cycles Increase water flow rate or pressure on and off as flow rate or pressure cycling hot and through system. cold is too low. Closed isolation valve. Open isolation valve. No Flow Mains water supply turned off. Turn on mains water supply. Temperatures not Inlet pipes have been connected Swap the inlet tails around. corresponding incorrectly

#### **General Cleaning**

with taps

Bristan products are made from premium materials, with hand polished, electroplated, PVD or EPD finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

#### Contact Us

## **BRISTAN**

Part of BRISTAN GROUP

#### Bristan Group Ltd. A Masco Company

UK: Bristan Group,

Pooley Hall Drive,

Birch Coppice Business Park,

Dordon, Tamworth

B78 1SG.

EU: Masco Europe S.à.r.l.

14 Rue Strachen 6933 Mensdorf Luxembourg

Email Us: enquire@bristan.com Website: www.bristan.com +44330 026 6273

#### **Our Guarantee**

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

Your guarantee starts from the purchase of your product, but you can still benefit from registering it for easier identification in the unlikely event of a manufacturing fault, please visit www.bristan.com/register

For any other queries, please call Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees

